

Pre-Configured Scenes

The following scenes are preconfigured for the different fixture types on the LIGHTDRIVE+:

Monochrome:

- Scene 1: Fade slow (On/Off)
- Scene 2: Fade medium (On/Off)
- Scene 3: Walk slow mid-size
- Scene 4: Walk slow small
- Scene 5: Walk medium mid-size
- Scene 6: White fix ~20%
- Scene 7: White fix ~50%
- Scene 8: White fix

RGB:

- Scene 1: Color fade slow
- Scene 2: Color fade medium
- Scene 3: Rainbow slow mid-size
- Scene 4: Rainbow slow small
- Scene 5: White fix
- Scene 6: Red fix
- Scene 7: Green fix
- Scene 8: Blue fix

Dynamic White:

- Scene 1: CW WW fade slow
- Scene 2: CW WW fade medium
- Scene 3: Walk slow mid-size
- Scene 4: Walk slow small
- Scene 5: Walk medium large
- Scene 6: CW fix
- Scene 7: WW fix
- Scene 8: CW+WW fix

RGBW:

- Scene 1: Color fade RGBW (RGB + Toggle White) slow
- Scene 2: Color fade RGB slow
- Scene 3: Rainbow RGB Toggle White slow mid-size
- Scene 4: Rainbow RGB + 50% White medium small
- Scene 5: White walk (only W Channel) slow mid-size
- Scene 6: White fix only W Channel
- Scene 7: White fix only RGB Channel
- Scene 8: White fix RGBW Channel

Legend:

- Slow and Medium = Speed
- Small, Mid-Size and Large = Effekt spread
- Fix = Constant color without change